

Configuring Modmax as a Client in IPStack Mode

In this week's blog, we'll provide you with sample configurations on how to configure a Modmax as a Client in order to connect to a Sever in IPStack Mode. For more information on the commands used below, please contact Maxon Technical support team on +61 2 8707 3000 or email support@maxon.com.au

Client Mode – Sample Configuration

AT+CGDCONT=1,"IP","telstra.corp"

[AT\\$DSID=Client@maxwan.com.au](mailto:AT$DSID=Client@maxwan.com.au)

AT\$\$\$SPC=356758

AT\$\$\$DSPW=*****

AT\$\$IPCTRIIP=0,172,16,0,1,20000 *Specify the IP address and Port the Server is listening on*

*for example **172.16.0.1 and 20000***

AT\$\$IPCFL=0,10

AT\$\$IPCFL=1,1

AT\$\$IPCFL=2,1

AT\$\$IPCFL=3,30

AT\$\$IPCFL=4,1

AT\$\$IPCFL=5,10

AT\$\$IPCFL=6,100

AT\$\$IPCFL=7,15

AT\$\$IPCFL=8,3

AT\$\$IPCFL=9,120

AT&D0

AT&C1

AT+IFC=0,0

AT\$\$\$RESET=30

AT+IPR=BAUD RATE

Please specify baud rate for the Modmax

AT&W1

AT&F1